

DOOR KNOCKER


FOR USE ON EXTERIOR OR INTERIOR
DOORS OF HOMES, CONDOMINIUMS,
APARTMENTS AND OFFICES.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 3/8" drill bit,
awl and screwdriver.

1. Position template (right) centered from
side to side 60" above threshold. Tape
template to outside of door.
2. Mark centers with awl (or nail) and
drill holes with 3/8" drill bit completely
through door.
3. Mount door knocker with screws and
cover washers.


Note: Check product against template before
installing.

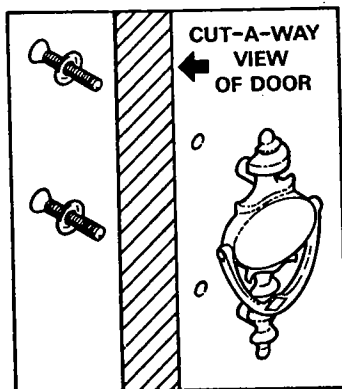

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear,
protective lacquer coating which helps
prevent discoloration. Do not use abrasive
waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE
HARDWARE BY H.B. IVES

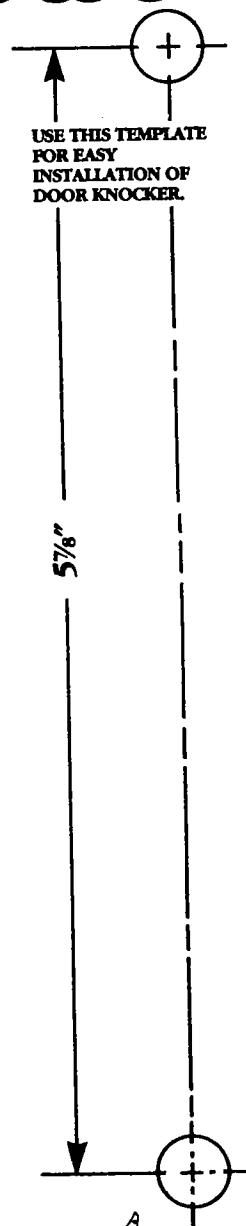

DOOR KNOCKER C2-3101-605 BRT

MADE EXCLUSIVELY FOR H.B. IVES IN PORTUGAL

H.B. Ives, New Haven, CT. 06511